

VF Radio Upgrade Kit

Apple Car Play + Android Auto

www.holdcom.com.au

Installation Process

Tools you need to prepare

1. 1 * panel remover
2. 1 * T20 screwdriver
3. 1 * T10 screwdriver(some car models need it to dis-assembly the glovebox)
4. Tape and towel-protect the trim and panel

Install Video:

Scan QR Code or go to:
<https://sneslo.short.gy/vf-upgrade>



Remark : Make Sure Car Engine Off Before The Installation. Open/Close The Driver Side Door ONCE, Wait Centre Screen Turns Black




1. Remove the trim plate from the center console




2. Unscrew the screws on the screen



3 Take out the knob panel

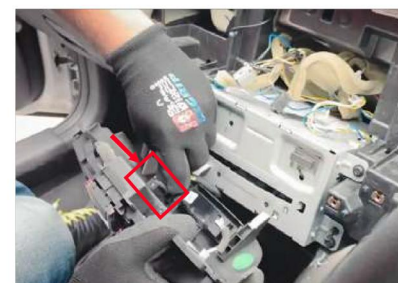

4. Remove the plug from the back of the panel

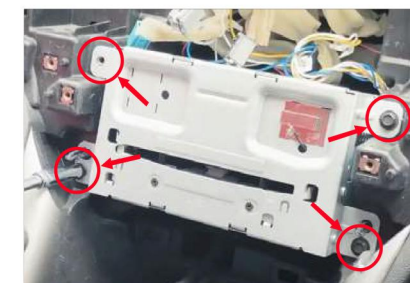

5. Unscrew the screws on the head unit




6. Take out the head unit



7. Unplug the main lines and video cable on the original head unit




8. Connect the CarPlay main line with the original car main line

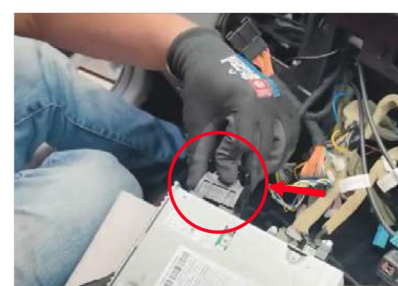

9. Connect the CarPlay main line to the original car head unit



10. Dock the main line of CarPlay with another main line of the head unit

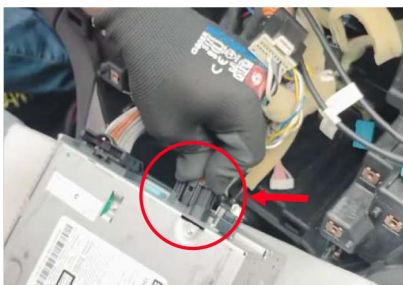


11. Connect the CarPlay main line to the original car head unit




12. Connect the CarPlay LVDS cable to the original car head unit



13. Dock the LVDS cable of CarPlay with video cable of the head unit

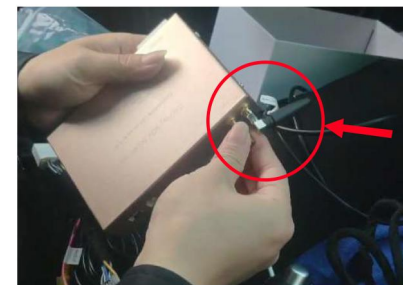

14. Connect CarPlay's WIFI antenna to the box

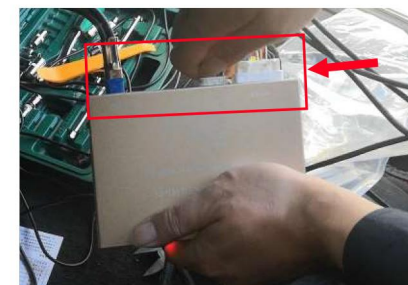


15. Connect cables to upgrade module. See wiring diagram for more help. Module is best mounted above the glovebox.

16. Connect the screen and button "Y" loom as shown:

Refer to wiring diagram for help.




17. After the CarPlay installation is completed, you can restore the original car layout

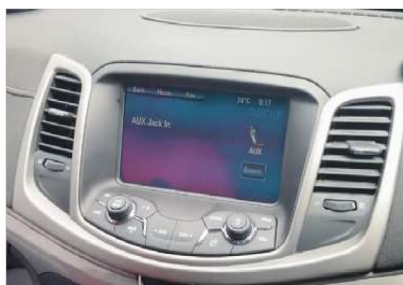

18. Select AUX in the media interface of the original car System



19. Long press HOME button to switch system

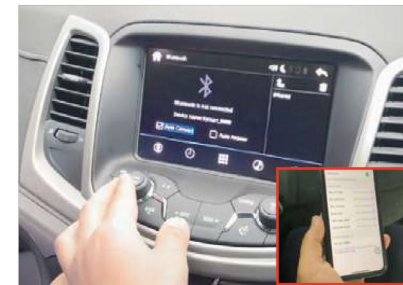

20. Keep phone WIFI ON, Open phone Bluetooth and searching (Find the Bluetooth name and pairing code of Upgrade Module) Insert pairing code







21. Click USE Carplay on your phone side. Or it will keep at searching interface.

IMPORTANT NOTE: To stream audio properly,

you must connect to both radios via Bluetooth. Select your music source in the factory radio screen, THEN switch to the new upgrade system to use it.

VF

Installation Diagram

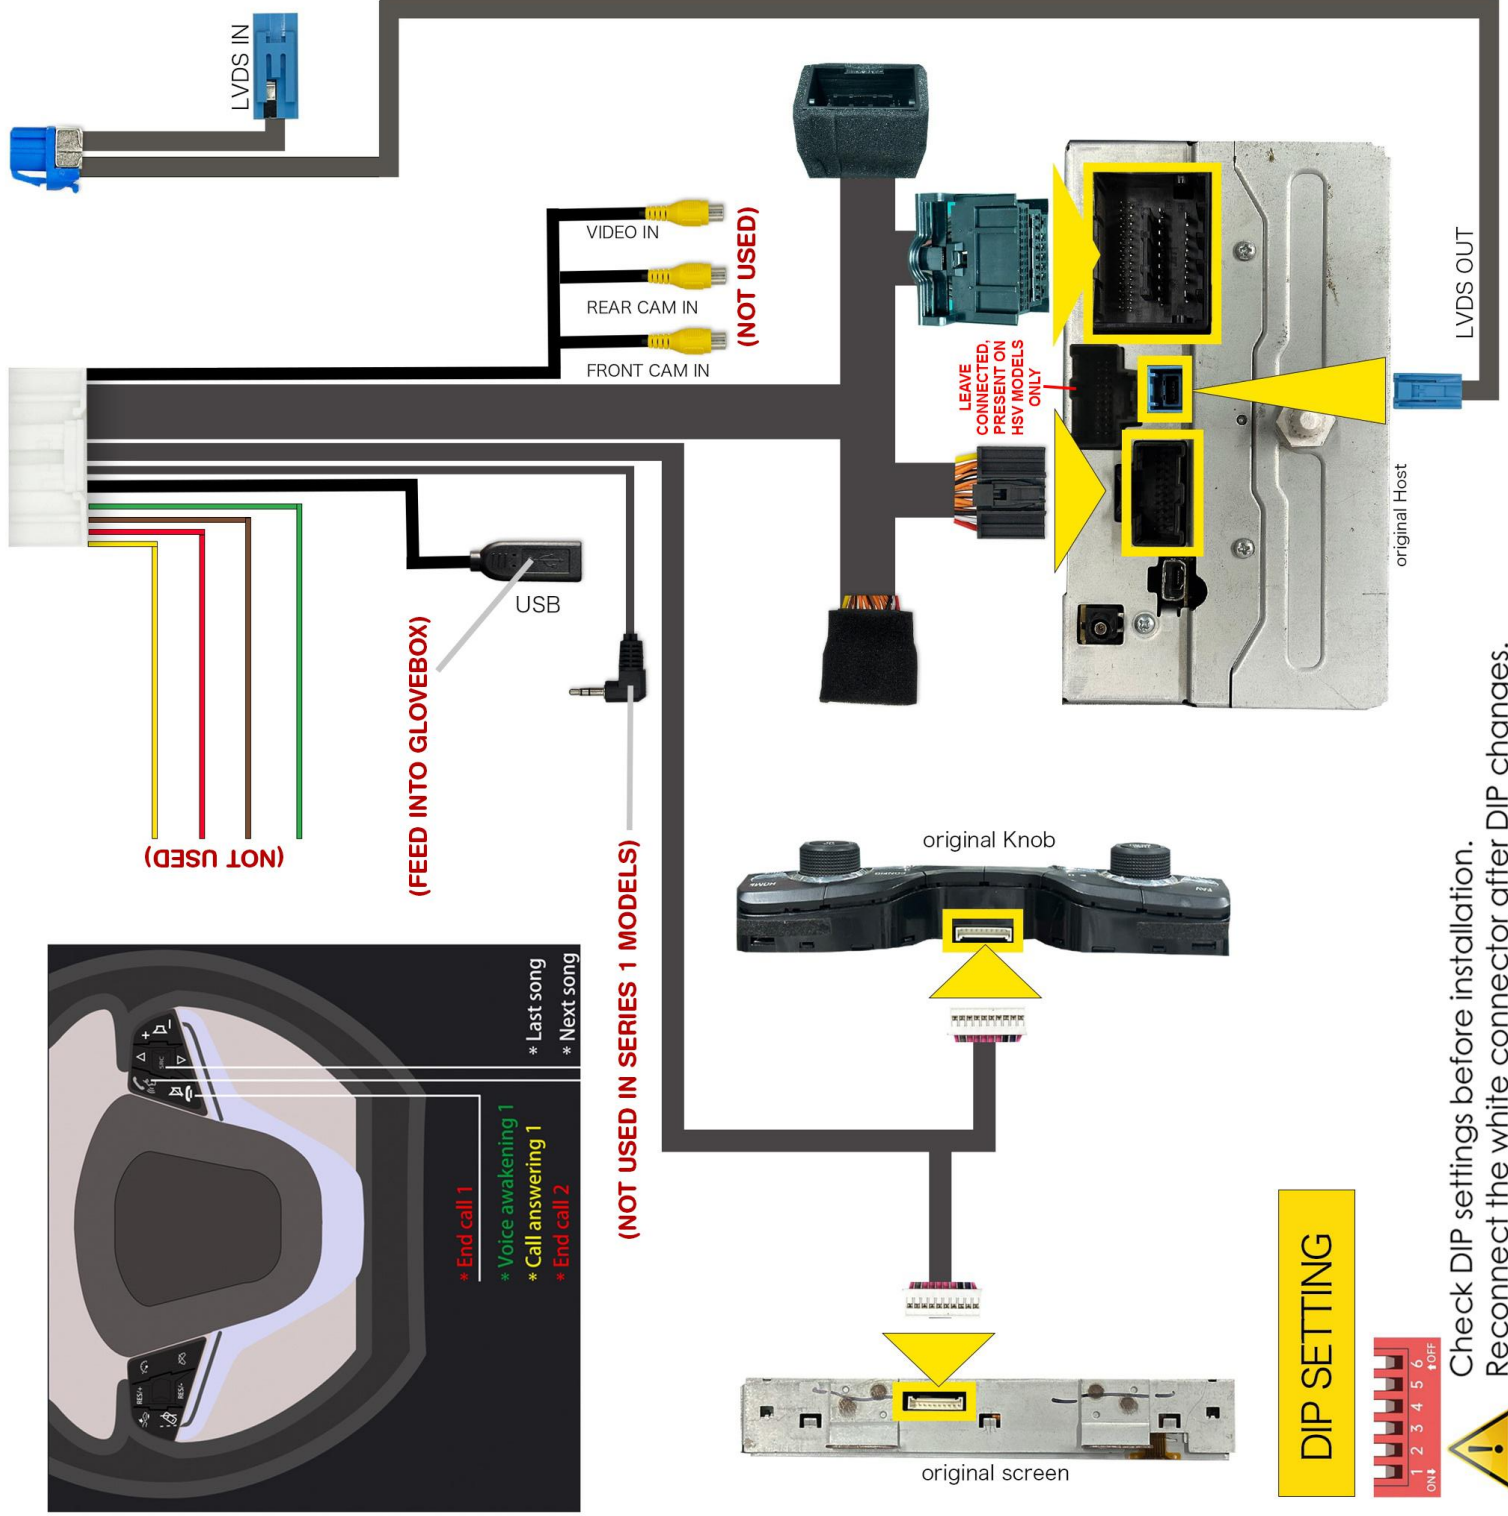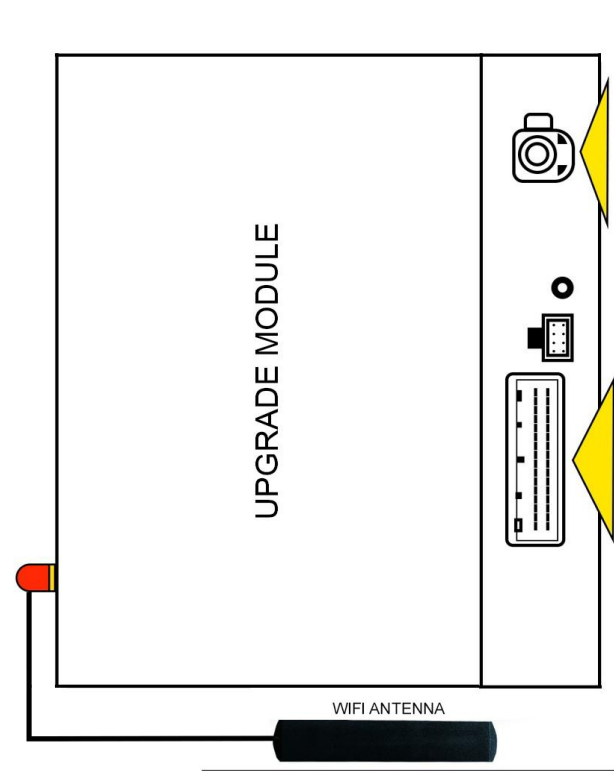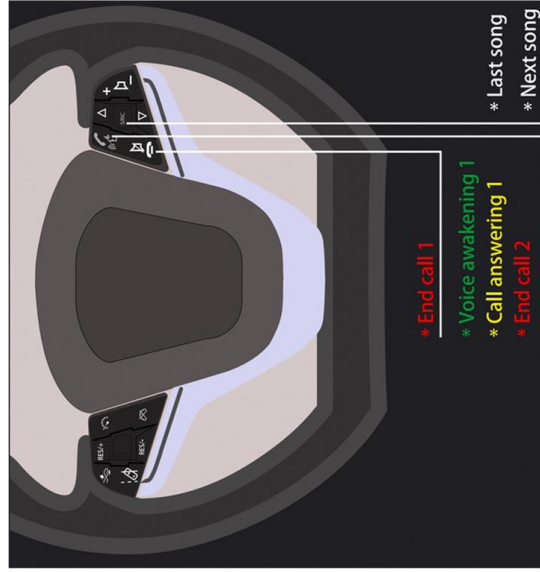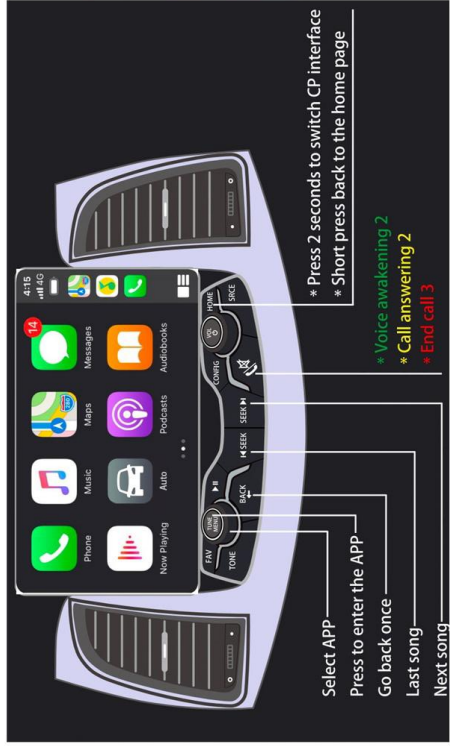

VF Installation Diagram

SERIES 2 MODELS ONLY

Connect as shown for Series 1, then connect Series 2 AUX module as shown.

NOTE: Make sure the phone's Bluetooth is unpaired from the original car Bluetooth, AND select "IPOD" as the source on the original radio system.

