
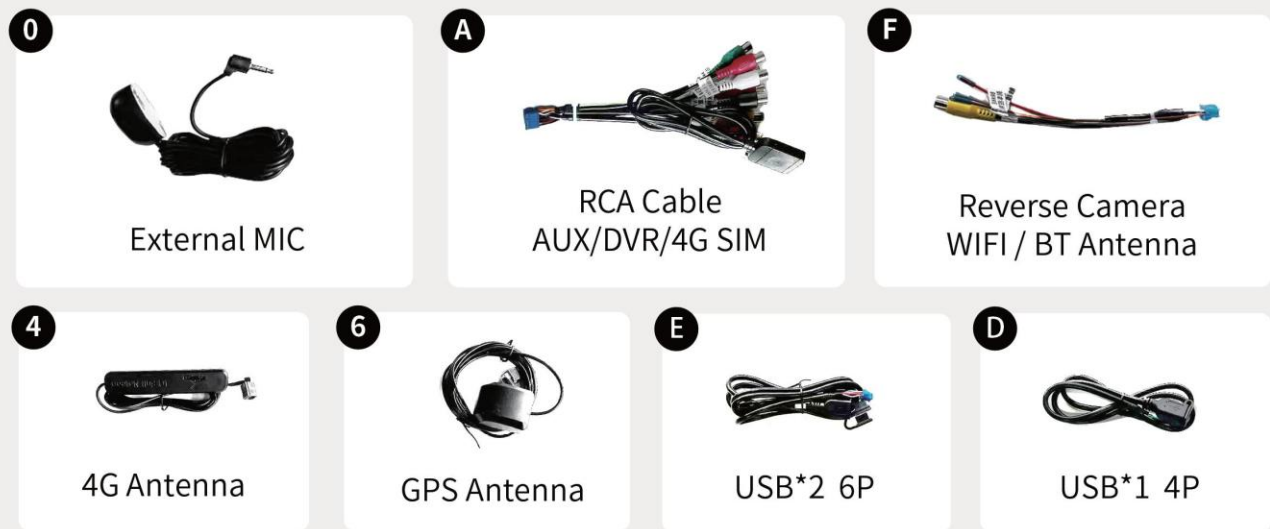



PREMIUM RADIO - INSTALLATION TIPS

Install Instructions v2 (27.8.2026)

HOLDCOM
AUTO PARTS
www.holdcom.com.au


Wiring Diagram

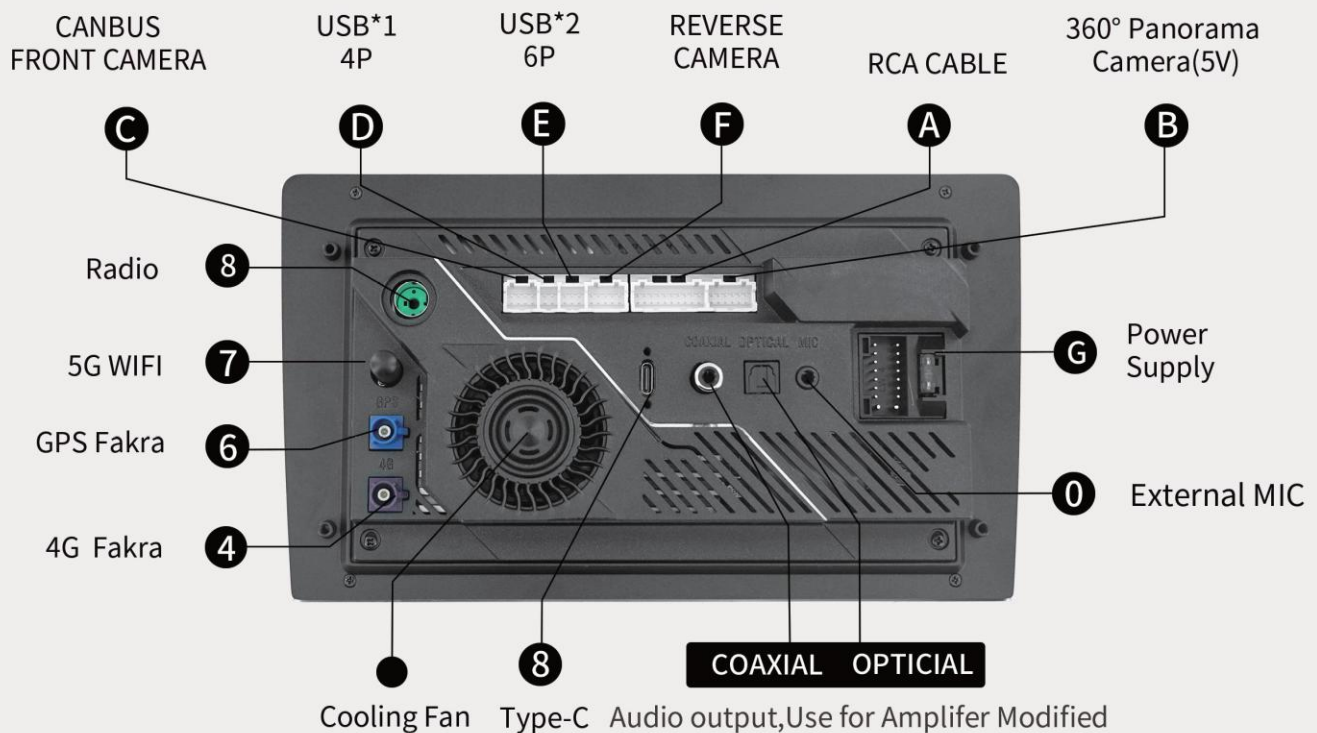

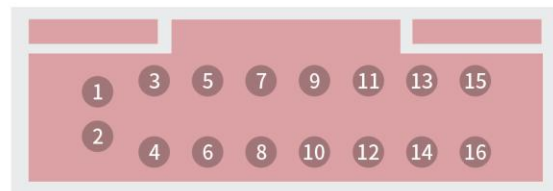


[G] Power Supply Connector

G1	GND	G2	B+ 12V
G3	ACC Key Switch + 12VDC	G4	Headlight Detect
G5	BACK Reverse Detect	G6	Steering Wheel Control Learning-2
G7	Steering Wheel Control Learning-1	G8	ANT Power 12V+
G9	Speaker Front Right FR-	G10	Speaker Rear Left RL-
G11	Speaker Front Right FR+	G12	Speaker Rear Left RL+
G13	Speaker Front Left FL-	G14	Speaker Rear Right RR+
G15	Speaker Front Left FL+	G16	Speaker Rear Right RR-

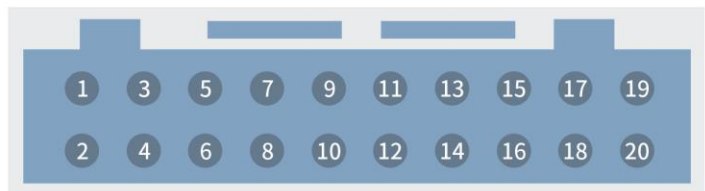


[A] RCA Audio/Video Input And Output

A1	AMP_POW Amplifier Control	A2	GND Ground (Audio RCA_FL+FR)
A3	AUX IN_R Right Channel Input	A4	RCA OUT_FL Front Left Output
A5	AUX IN_L Left Channel Input	A6	RCA OUT_FR Front Right Output
A7	SIMO_DA SIM Card Data	A8	GND Ground (Audio AUX IN L+R)
A9	SIMO_DET SIM Card Detection	A10	GND SIM Card Ground
A11	SIMO_CKL SIM Card Clock	A12	GND Ground (Video CVBS IN2)
A13	SIM Card Reset	A14	NC(Reserved)
A15	VDD_SIMO SIM Power Supply	A16	Subwoofer(Reserved)
A17	Center Audio Output	A18	AUX IN CVBS Video Input
A19	RCA OUT_RR Rear Right Output	A20	RCA OUT_RL Rear Left Output

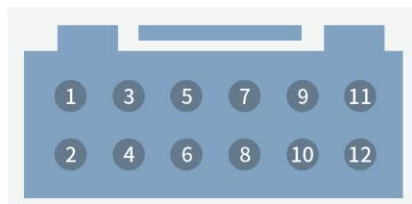


[B] 360° Panoramic Camera(5V)

B1	L_TNRN Turn Left Detect
B2	R_TNRN Turn Right Detect
B3	GND_Front Camera
B4	360CVBS_0_Front Camera
B5	GND_Right Camera
B6	360CVBS_1_Right Camera
B7	GND_Back Camera
B8	360CVBS_2_Back Camera
B9	GND_Left Camera
B10	360CVBS_3_Left Camera
B11	VCC_5V_Front/Back Camera
B12	VCC_5V_Left/Right Camera

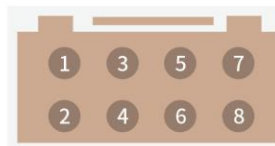

[C] CANBUS/Front Camera

C1	GND
C2	BATT_12V Power Supply
C3	AUX 2 L Audio Left Channel
C4	AUX 2 R Audio Right Channel
C5	KEY_RST Reset
C6	TV-IN(TV Video Input)
C7	CAN_RXD CANBUS TX
C8	CAN_TXD CANBUS RX

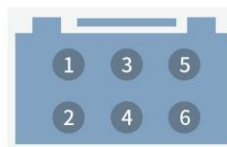

[E] Dual USB 6P

E1	USB 5V Power Supply
E2	USB 2_DP Data
E3	USB GND Ground
E4	USB 2_DN Data
E5	USB 3_DN Data
E6	USB 3_DP Data



[D] USB1 4P

D1	USB1 5V Power Supply
D2	USB1 DP Data
D3	USB GND Ground
D4	USB1_DN Data



[F] Reversing Camera

F1	TX2 CANBUS&Peripheral&UART
F2	BT_ANT External Bluetooth Antenna
F3	RX2 CANBUS&Peripheral&UART
F4	GND Ground
F5	IR Output (CMMB)
F6	CAM_CVBS Reverse Camera
F7	Reverse camera 12V Power supply
F8	Reverse camera GND
F9	Handbrake Detect
F10	ANT Bluetooth/WiFi RF Antenna

G Power Cord Definition Diagram



Power connector:

G1 for main ground, G2 for main power +, through the battery positive

Detection Line:

ACC is to detect the vehicle power up, used to wake up or start the car.


Small light detection (ILL) is used to detect the brightness of the screen is reduced after the light is turned on and to light up the touch buttons. Reverse detection (BACK) is used to detect whether the vehicle is reversing and switch the reverse screen.

Power interface: G6/G7 is used to learn the steering wheel button definition for non-protocol models.

Antenna power supply: used to power the active radio antenna.

NOTE: Wires G6 and G7 are not used at all, wire G5 is only used if installing reverse camera.

DO NOT USE FACTORY SPEAKER WIRING, YOU MUST RUN NEW CABLES TO EACH SPEAKER!

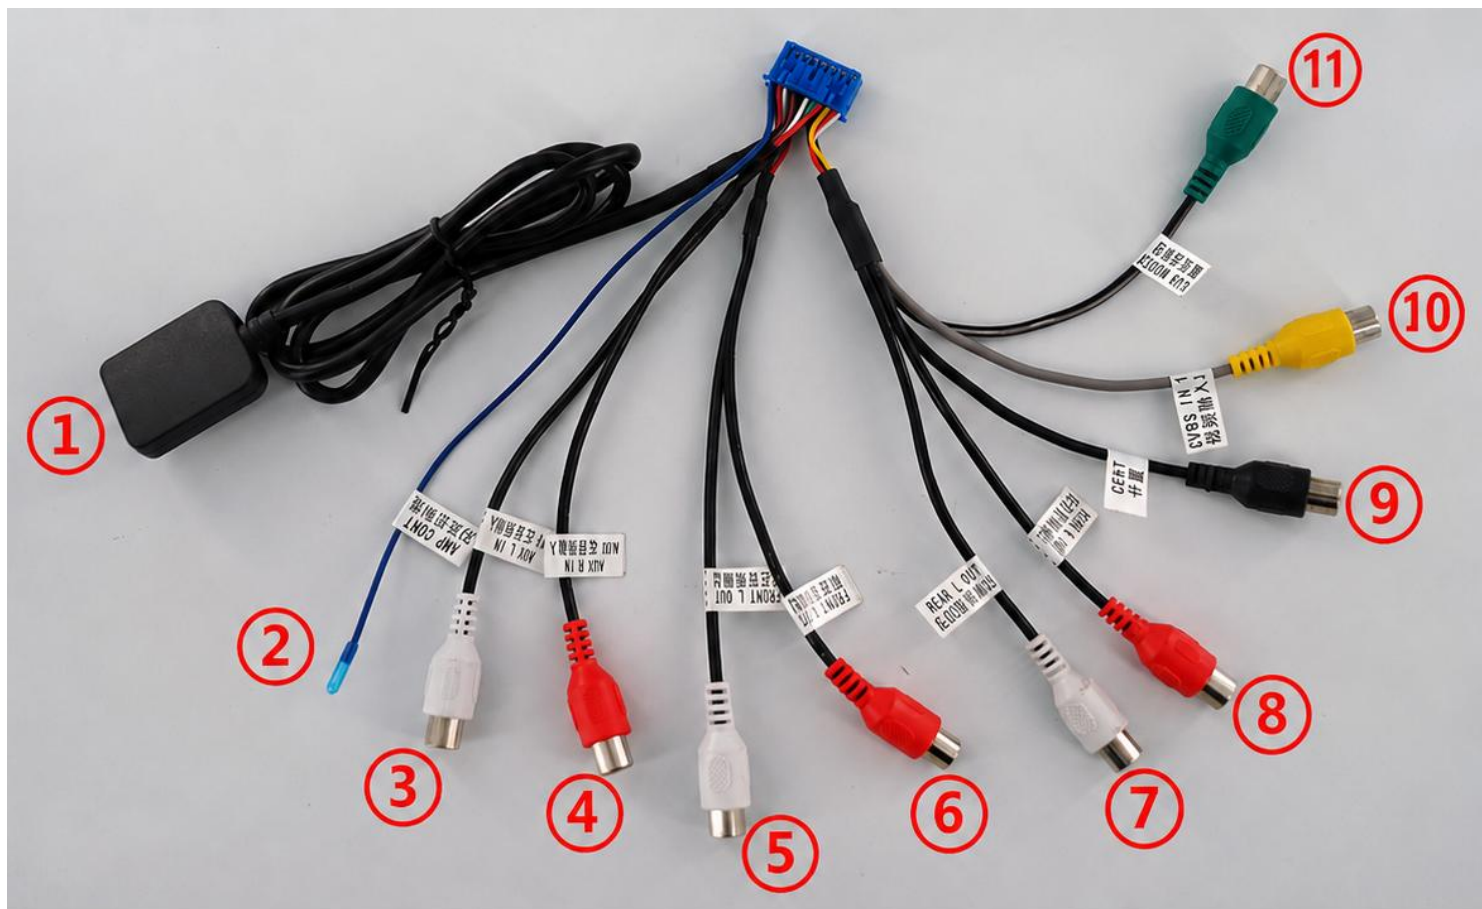

S3 Zone A cable instructions (audio output/input are both low and cannot be connected directly to speakers)

【1】4G Card Slot

【2】AMP Control Wire

【3】AUX L IN AUX

【4】AUX R IN AUX

【5】FRONT L OUT

【6】FRONT R OUT

【7】REAR L OUT

【8】REAR R OUT

【9】Centre audio output (need to connect active centre, passive centre needs to be driven by external amplifier)

【10】Video CVBS Input 1 (connect to original car right view, turn on it in car AUX)

【11】SUB WOOFER output (need to connect active subwoofer, passive subwoofer needs to be driven by external amplifier)

This loom **MUST** be connected for Wifi and Bluetooth to work:




Microphone

The radio has a built-in mic on the front, but also comes with an external one if you prefer to use that instead.

Reverse Camera

The radio supports reverse camera input. Connect the camera RCA output cable to the loom below, using the yellow RCA connection.

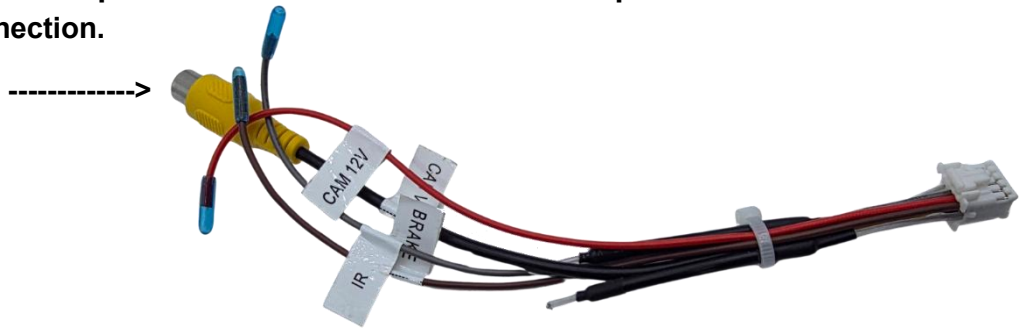

GPS Antenna Installation

Antenna should be stuck down on a flat level surface, not under any metal bodywork where possible. Adhesive side facing down.

PREMIUM RADIO - USAGE TIPS

SYSTEM UPDATES:

After installing, please check radio for updates for the best experience:
Settings > About Device > System Updates > Check for Update

APPLE CARPLAY / ANDROID AUTO:

Use the “CarLink 2.0” App. See below to make it auto start.

SET DATE AND TIME:

1. Go to Settings > About Device (on left menu)
2. On right-hand menu, select “More Settings / Android Settings”
3. On the left-hand menu, select “System”
4. Select “Date and Time” on the right-hand menu

AUTO START APP ON START-UP:

1. Settings > More Features > Tasks > Press “+”
2. Trigger = Under Vehicle Information, select “Vehicle Ignition”.
3. Delay = 3 Seconds
4. Action to be performed = Start App
5. Select the app “Carlink 2.0”, for example. This will auto start CarPlay/Android Auto.

SCREEN PROTECTOR:

The units come pre-fitted with at least one screen protector. Some may have two. These can safely be removed, if desired.

PRODUCT WARRANTY

NOTE: Warranty starts from the date product is received; not from the date it is fitted or used.
Warranties are also NOT transferrable.

New Products

12 Months Warranty, unless stated otherwise in the product description.

Electrical and Engine / Driveline Parts

The warranties stated above are only valid if installation of our product is carried out by a registered business and fitted by a qualified, licensed technician. We reserve the right to decline warranty and returns for products that have been incorrectly installed, modified or damaged due to poor quality fitting and/or wiring. **NOTE: We do NOT consider mechanics qualified to install electrical products - only Auto Electricians.**